

 
APX M-S3 Cascading Communication Cable Instruction Manual

1. Materials Bill



A

A Parallel communication cable *1




B

B Waterproof plug *1

2 Instructions for Use


For the MID 29.9-50K-HU inverter, when batteries are used in multi-cluster, use the "Parallel communication cable" (A) for inter-cluster communication. Then, connect the "APX→INV communication cable" from only one cluster to the inverter. For the remaining cluster(s), seal the corresponding cable with the supplied waterproof plug (B).

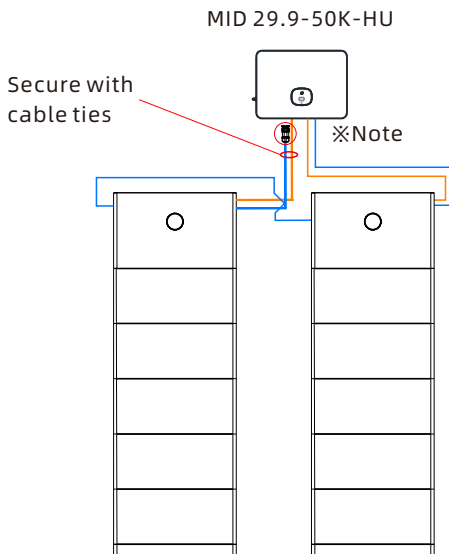


※Note:

For the MID 29.9-50K-HU inverter, when batteries are used in multi-cluster, connect the "APX→INV communication cable" from only one cluster to the inverter. For the remaining cluster(s), seal the corresponding cable with the supplied waterproof plug.


Method of installing the waterproof plug (B):

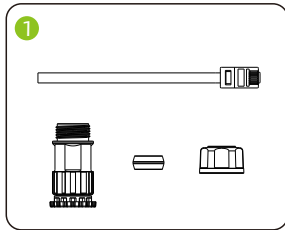

1 Remove the plug and take it apart.

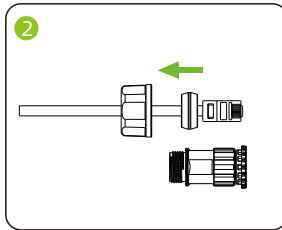

2 Thread them onto the string one by one.

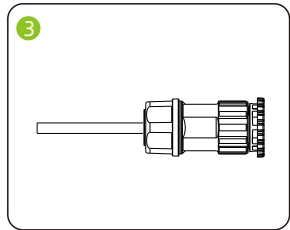

3 Tighten the lid.

3. Service and contact

E
W

For local customer support, please visit



Download
Manual

GR-UM-561-A-00 (PN: 044.0164200)